


PRODUCT INSTALLATION GUIDE

www.modernhousenumbers.com

MAILBOX DECAL

STEP 1

Gather supplies: mailbox numbers, (not included: tape, and ruler). Note: decals should not be applied on rough surfaces or in wet, freezing conditions.

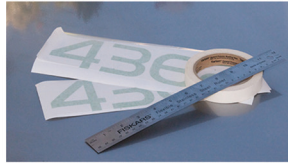

STEP 3

Peel off the number backing and align with tape guide. Press numbers firmly onto mailbox. Apply even pressure along the entire surface.

STEP 2

Clean and dry the mailbox surface. Measure the desired number location. Place a piece of tape to align the bottom edge of the numbers.



STEP 4

Slowly peel off the clear, front transfer film. Remove tape.