


QUICKSHIP NUMBERS INSTALLATION GUIDE

www.modernhousenumbers.com

ASSEMBLY OF DRILLING TEMPLATES


STEP 1

Arrange individual paper templates in desired order. Gather supplies: tape and ruler (not included). *For horizontal arrangement, go to step 2A. For vertical arrangement, skip to step 3A.*

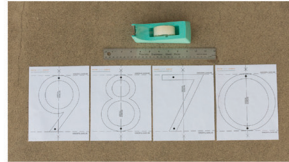



STEP 2A: HORIZONTAL ARRANGEMENT

Align paper templates horizontally using labeled guidelines at top and bottom.

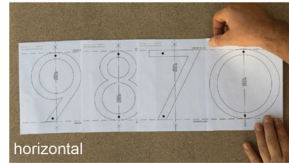

STEP 2B: HORIZONTAL ARRANGEMENT

Determine the spacing between each number within the available installation area. Use a ruler to measure the space between each number. Typically spacing is equal. Skip to step 4.

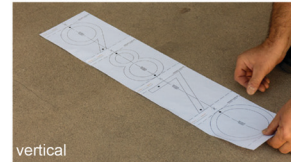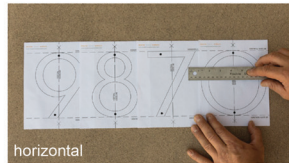


vertical

STEP 3A: VERTICAL ARRANGEMENT

Align templates vertically using labeled vertical guideline.

STEP 3B: VERTICAL ARRANGEMENT

Align "X" marks on each template at top and bottom to achieve equal spacing between each number. Keep vertical guidelines aligned. Overlap of template edges is to be expected.

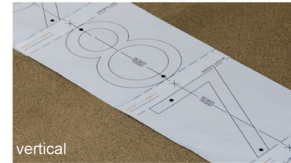

vertical

STEP 4

Use clear tape to connect individual templates together. Keep guidelines straight, maintain your desired spacing. This is your drilling guide. Overlap of template edges is to be expected.

