




SCAN TO VIEW INSTALL
INSTRUCTIONS ONLINE

INSTALLATION INSTRUCTIONS

MAILBOX DECALS

STEP 1

Gather supplies - mailbox numbers, (not included: tape, and ruler).
Note: vinyl should not be applied in wet or freezing conditions.

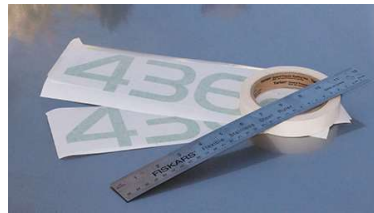

STEP 3

Peel off the number backing and align with tape guide. Press numbers firmly onto mailbox. Apply even pressure along the entire surface.

STEP 2

Clean and dry the mailbox surface.
Measure the desired number location.
Place a piece of tape to align the bottom of the numbers.



STEP 4

Slowly remove the front transfer film and tape.