



## INSTALLATION INSTRUCTIONS

### PLAQUE WITH CONTRAST PLATE


#### STEP 1

Gather supplies: plaque, contrast plate, washers, template, studs, spacers, (not included: masking tape, epoxy, rubber mallet, drill, level). Masonry, concrete, and stone installations may require a hammer.



#### STEP 2

Tape template at desired location. Use a level to align template. Drill holes according to template. Use 11/64" drill bit or specialty 3/16" bit for masonry and rock. Carefully remove template.

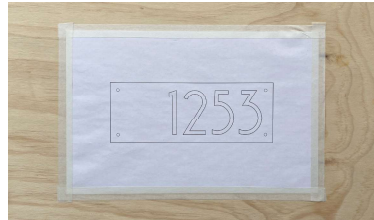

#### STEP 3

Apply a thin layer of epoxy to one end of the stud. Push studs into pre-drilled holes on the back of plaque.



#### STEP 4

Place plaque on a soft surface to avoid scratching. Lightly tap studs into holes, if necessary.

#### STEP 5

Slide contrast plate over studs so it rests behind plaque. Then add washers, followed by spacers.



#### STEP 6

Push plaque into holes. Light tapping with a rubber mallet may be required. Take care to not scratch the face of the plaque. Note: Steel studs must be fully concealed to protect from the elements.



#### CARING FOR YOUR PRODUCTS:

To extend the effective life of your numbers and plaques, clean them every six months or every three months in coastal or industrial regions. Use a soft cloth and a mild household detergent solution to remove dust, salt, and other deposits. Rinse gently with clean, fresh water. Dry with non-abrasive towel.

Love your Modern House Numbers? Send your best photos to [photos@modernhousenumbers.com](mailto:photos@modernhousenumbers.com).