



SCAN TO VIEW INSTALL
INSTRUCTIONS ONLINE

INSTALLATION INSTRUCTIONS

NUMBERS AND LETTERS

STEP 1

Gather supplies: house numbers, template, studs, spacers, (not included: tape, clear, quick-dry epoxy, rubber mallet, drill, level). Masonry surfaces may require hammer drill.




STEP 4

Push studs into pre-drilled holes on the back of the number. Light tapping may be required. If so, place on a soft surface. Take extra care not to scratch the face of the number.

STEP 2

Tape template at desired location. Use a level to align template. Drill holes according to template. Use 11/64" drill bit or specialty 3/16" bit for masonry and rock. Carefully remove template.

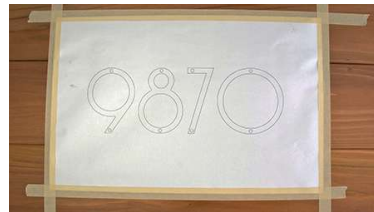

STEP 5

Slide spacers over studs. Apply a thin layer of epoxy to the end of the exposed studs.

STEP 3

Apply a thin layer of epoxy to one end of the stud.



STEP 6

Push number into holes. Light tapping with a rubber mallet may be required. Take care not to scratch the face of the number. Note: Steel studs must be fully encapsulated to protect from the elements.

CARING FOR YOUR PRODUCTS:

To extend the effective life of your numbers and plaques, clean them every six months or every three months in coastal or industrial regions. Use a soft cloth and a mild household detergent solution to remove dust, salt, and other deposits. Rinse gently with clean, fresh water. Dry with non-abrasive towel.

Love your Modern House Numbers? Send your best photos to photos@modernhousenumbers.com.